



Portawash

Portable Twin Tub Washing Machine

Operating Instructions.



- Washing Capacity: 3.0kg (washing & water combined).
- Spinning Capacity: 2.5kg (after removal of excess water).
- Washing Power: 230W
- Spinning Power: 116W



Portawash Parts Identification



- 1 Water Inlet
- 2 Washer Cover
- 3 Washer Tub
- 4 Drain Selector
- 5 Wash Timer
- 6 Spin Timer
- 7 Spin Cover
- 8 Spin Tub
- 9 Carrying Handle



Water Inlet Hose



Clothing Cover

INFORMATION

Preparation and usage of washing machine:

1. Remove all packaging and ensure air ventilation point is not blocked.
2. Make sure the water inlet tube is securely fastened to the washing machine & tap before any use.
3. Place clothes in Washer tub (3) - (taking care not to overload, maximum load 3.0kg including water required).
4. Add hot water from tap to around $\frac{3}{4}$ full (alternatively this can be added from a bucket or other suitable water carrier. Please note-DO NOT use boiling water from a kettle), add powder in an appropriate amount for the wash required.
5. Turn the Drain selector (4) to required wash (Gentle Wash: For light laundry & soft material or normal wash: For all type of materials and laundry). Then turn the Wash timer (5) to required amount (between 3 & 15 mins), wash will begin automatically.
6. When the wash cycle is finished ensure the drainage tube is in a suitable place to drain the water (i.e. floor outside or a sink), turn the Drain selector (4) to "Drain", also the clothing cover can be used to press down gently on the clothes to remove excess water, additionally, if appropriate for the washing load, wring any further excess water before placing in the Spinning tub (8).
7. If appropriate for the clothing place the washed load into the Spinning tub (8), then turn the Spin timer (6) to required amount (between 1 & 5 mins).



Safety Guidelines:



1. Do not use the washer in a bathroom or other humid place.

2. Do not use the washer on an inclined or bumpy surface and keep away from wall by at least 2cm.



3. Never place your hands into the wash/spin tub while the washer is in operation.

4. Use the washer away from direct sunlight.



5. Try to avoid splashing water on to the control panel where the timer and switches are located.

6. Not for use by children, never leave the Portawash unattended when children are nearby.



7. Do not use water hotter than 50°C. This may cause damage to the Portawash casing.

8. Always use the Portawash on a hard surface to avoid blocking the air ventilation.



9. Never place naked flames near the Portawash, do not place any items on top of the Portawash when in use.




1. Please wash the light colour clothes and dark colour clothes separately.



3. Please remove coins and sharp objects from clothes before washing.



5. Do not wash or dry any clothes containing petrol or alcohol.



2. Please wash dirty clothes separately.



4. Please turn socks inside-out when washing.



6. Please place small items and knitted items in a washing net before washing.

CAUTION

1. The machine should only be connected to a fused, earthed plug socket.
2. Please use a plug socket where the electric current is higher than 5 Amp.
3. Please do not cut, twist, or otherwise damage the power cord or hang any items on it.
4. Please do not unplug from the power supply socket with wet hands.
5. This appliance not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with or near the appliance.
6. If the power cord is damaged, it must be replaced by qualified engineer.

PLEASE NOTE: Use of this washing machine is entirely at the users own risk. No liability for damage to any items using this machine will be accepted by Streetwize Accessories.



Streetwize Accessories: Sales enquiries: sales@streetwizeaccessories.com
Technical enquiries: support@streetwizeaccessories.com **Telephone:** 0161 447 8597
www.streetwizeaccessories.com